

# ADVANCED USER GUIDE

## Update Remote Control Firmware:

Open the AirIQ App via mobile device and navigate to **Menu> Connect To Remote**. Then on the remote press **2** Top Lock/Unlock or **6** Back Unlock to unlock the remote. The remote will automatically connect to the App. Follow the prompts on the App to complete the remote firmware update..

## Password Protect Remote Control:

To prevent other remotes or Apps from controlling the AirIQ, first connect the App via mobile device to the AirIQ and set a custom password by navigating to **Menu> Set Password> Save**. Then use the App to navigate to **Menu> Connect To Remote**. Then on the remote press **2** Top Lock/Unlock or **6** Back Unlock to unlock the remote. The remote will automatically connect to the App and automatically receive the stored password.

## Connect Remote to Different AirIQ:

**HOLD 1** Bluetooth for 3 seconds (use a pointed object to push button). If more than one AirIQ is within range, use **7** Preset Scroll (Left) or **7** Preset Scroll (Right) to select which AirIQ is desired then press **7** Preset Select-Save to connect.

## Clear Remote Password:

Press the **1** Bluetooth 3 times in a row (use a pointed object to push button) to automatically clear the password saved in the remote.

**NOTE:** Remotes with the password cleared will only connect to AirIQ systems that also have the password cleared.

## Error Codes:

The remote reports AirIQ errors via popup notifications on the display. Clear the notifications by pressing **7** Preset Select-Save.

## Enter Demo Mode:

After the remote is unlocked, **HOLD 1** Bluetooth (use a pointed object to push button) and **7** Preset Select-Save at the same time for 5 seconds to enter Demo Mode. Demo mode simulates the user interface without being connected to an AirIQ system.

Customer Service: 800-549-4620 | [tech@LOGIQair.com](mailto:tech@LOGIQair.com)



## 2-CHANNEL REMOTE CONTROL

### Instruction Manual Rev.01

#### Kit Includes:

- (1) 2-Channel Remote Control
- (3) AAA Batteries (non-rechargeable)
- (1) Magnetic Visor Dock,  
(place around front edge of visor facing down)

#### Not Included (optional use):

- USB-C Power Cable
- Magnetic Phone Mount,  
(for dash or console mounting)

**! WARNING:** Before inflating or deflating the system, make sure that the vehicle is clear of persons or obstructions. Failure to do so may result in death, injury, or physical damage.


**! WARNING:** It is the user's responsibility to confirm that the air suspension is at the desired pressure settings prior to operating the vehicle. Failure to do so may result in death, injury, or physical damage.

**! CAUTION:** The 2-Channel Remote Control is not weather-sealed. Exposure to water or liquids may result in permanent damage.

## Warranty

LOGIQ™ provides a limited lifetime warranty to the original purchaser of products, that the product be free from defects in workmanship and materials when used on cars and trucks as specified by LOGIQ™ and under normal operating conditions. This warranty is subject to the requirements and exclusions set forth in the full Limited Warranty and Return Policy that is available at [logiqair.com/warranty](http://logiqair.com/warranty).

- 1 Bluetooth**
- 2 Top Lock / Unlock**
- 3 Preset Carousel**
- 4 Air Spring Pressure**  
Driver / Passenger (Paired for SD1)
- 5 Tank Pressure**  
If Tank Attached is (ON) in App
- 6 Back Unlock**  
*On Back Side*
- 7 Preset Navigation**  
Scroll Left / Select - Save / Scroll Right
- 8 Paired Controls**  
Driver + Passenger
- 9 Individual Controls**  
Driver / Passenger (Paired for SD1)
- 10 USB-C Port**  
Powers Remote (Does NOT Recharge)

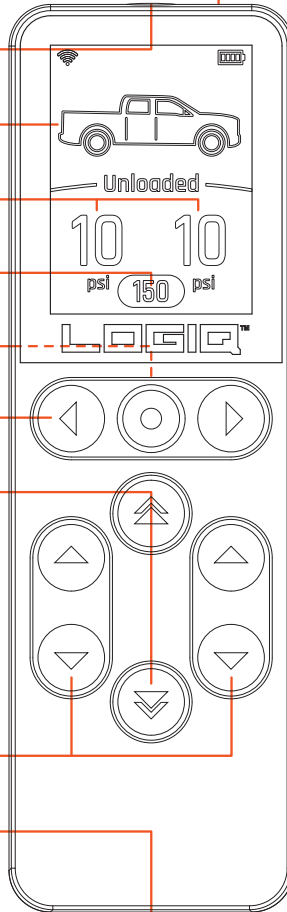

## Install Batteries (AAA x 3):

Press the small tab on the back of the remote deep enough to slide the battery cover downward. Install the (3) AAA batteries included. Reinstall the battery cover while pressing inward for the tabs to catch.

## Turn Remote ON:

Press any button for 1 second and release.

## Unlock Remote:

Press **2** Top Lock/Unlock or **6** Back Unlock to unlock the remote.

## Connect Remote to AirIQ:

After the remote is unlocked, it will automatically connect to the nearest AirIQ. If more than one AirIQ is within range, use **7** Preset Scroll (Left) or **7** Preset Scroll (Right) to select which AirIQ is desired then press **7** Preset Select-Save to connect.

## Lock Remote:

During operation, the remote may be locked at any time by pressing **2** Top Lock/Unlock. The remote will automatically lock after 20 seconds of inactivity while operating in battery mode. The remote will never automatically lock while powered via the **10** USB-C Port.

## Manual Inflation / Deflation:

Press the **8** Paired Controls, or **9** Individual Controls to manually inflate or deflate the air springs.

## Automatic Inflation / Deflation (Presets):

Use **7** Preset Scroll (Left) or **7** Preset Scroll (Right) to select the desired preset, then press **7** Preset Select-Save to begin adjustment.

## Save a New Preset:

Press the **8** Paired Controls, or **9** Individual Controls to manually inflate or deflate the air spring to the pressures that you wish to save. Then use **7** Preset Scroll (Left) or **7** Preset Scroll (Right) to select the desired preset position, then **HOLD 7** Preset Select-Save for 3-seconds to save this preset into memory. **NOTE:** Use the AirIQ App to customize the preset name and icon.