



**INSTALLATION INSTRUCTIONS**  
**LK4001**  
**SWAY BAR DROP DOWN BRACKETS**

**300 W. Pontiac Way Clovis, CA 93612 toll free: 1-800-445-3767 web: www.belltech.com**

**2007-2008 GM1500 2WD/4WD CREW CAB 6" LIFT**

**Thank you for being selective enough to choose our high quality BELLTECH PRODUCT. We have spent many hours developing our line of products so that you will receive maximum performance with minimum difficulty during installation**

Note: Confirm that all of the hardware listed in the parts list is in the kit. **Do not** begin installation if any part is missing. Read the instructions thoroughly before beginning this installation.

**Warning: DO NOT** work under a vehicle supported by only a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

**Warning: DO NOT** drive vehicle until all work has been completed and checked. Torque all hardware to specified values.

Reminder: Proper use of safety equipment and eye/face/hand protection is absolutely necessary when using these tools to perform procedures!

Note: It is very helpful to have an assistant available during installation.

Note: Please refer to component and hardware list before beginning installation to insure all necessary pieces have been supplied and packaged.

**Exceptional Customer Experience Guarantee:**

**STOP!** We strive for an exceptional experience for all of our valued customers. If, for any reason, you need assistance with your Belltech products, *please do not return the products to the store or website you purchased from.* Please call our dedicated experts at (1-800-445-3767) from 7am to 5pm PST.


**RECOMMENDED TOOLS:**

- Properly rated floor jack and support stands
- Wheel chocks
- Torque wrench up to 200 ft/lbs range
- Standard and Metric socket wrench set
- Standard and Metric wrench set
- Tape measure
- Safety Glasses

1. Verify that the kit comes with two BELLTECH swaybar drop down brackets. **(PICTURE 1)**




2. Align the BELLTECH swaybar drop down brackets, flat side towards the outside of the vehicle, with the OEM bolt holes on the frame; using the factory bolts, insert and torque to 50 ft\*lbs. **(PICTURE 2)**

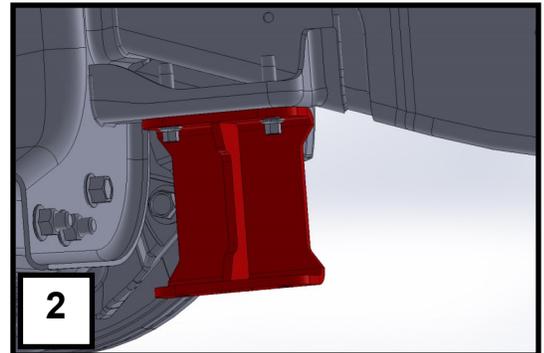


**\*\*Note orientation of bracket\*\***


3. Install the OEM swaybar with bracket and bushing onto the BELLTECH swaybar drop down bracket using the supplied hardware. **(PICTURE 3 & 4)**

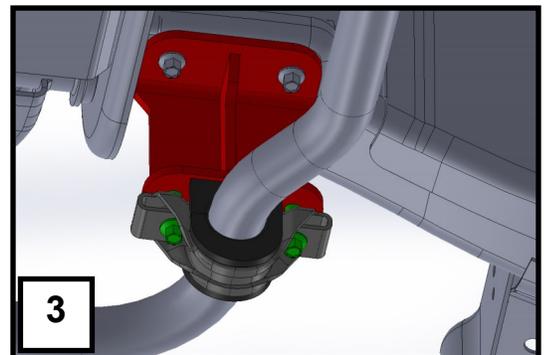

4. Do **NOT** torque down the sway bar bracket to the BELLTECH swaybar drop down bracket as it will be easier to install the rest of the components in the lift kit.

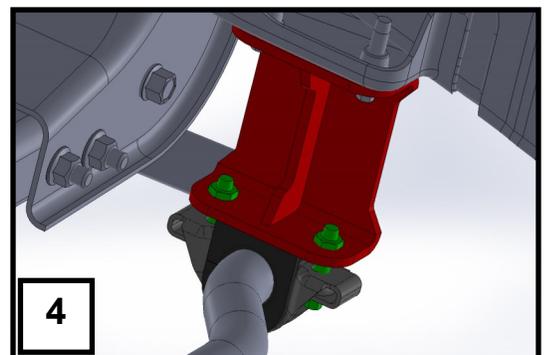

5. Torque the swaybar bracket to 50 ft\*lbs once the rest of the front suspension has been installed. Final Position as shown in **(PICTURE 5)**

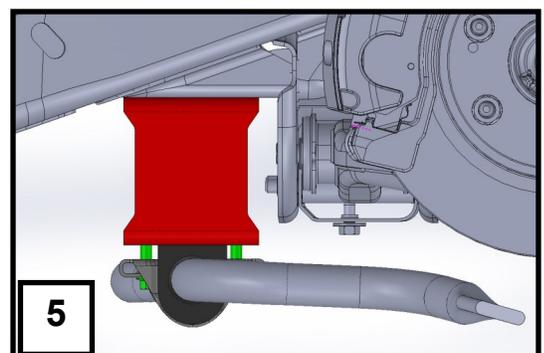

**\*\*\* CONTINUE WITH THE BELLTECH KIT**

### PARTS LIST

Part Number	Description	QTY
150201-113	Sway Bar Drop Down	2
110230	BOLT M10 X 1.25-25MM	4
110239	M10 washer	8
110244	Nylon lock Nut	4