



## INSTALLATION INSTRUCTIONS

LK3002

STRUT SPACER

300 W. Pontiac Way Clovis, CA 93612 toll free: 1-800-445-3767 web: [www.belltech.com](http://www.belltech.com)

### 19+ GM1500 2WD/4WD CREW CAB

**\*\*EXCLUDES: CLASSIC BODY STYLE, AT4 & TRAIL BOSS\*\***

**Thank you for being selective enough to choose our high quality BELLTECH PRODUCT. We have spent many hours developing our line of products so that you will receive maximum performance with minimum difficulty during installation**

Note: Confirm that all of the hardware listed in the parts list is in the kit. **Do not** begin installation if any part is missing. Read the instructions thoroughly before beginning this installation.

**Warning: DO NOT** work under a vehicle supported by only a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

**Warning: DO NOT** drive vehicle until all work has been completed and checked. Torque all hardware to specified values.

Reminder: Proper use of safety equipment and eye/face/hand protection is absolutely necessary when using these tools to perform procedures!

Note: It is very helpful to have an assistant available during installation.

Note: Please refer to component and hardware list before beginning installation to insure all necessary pieces have been supplied and packaged.

### **Exceptional Customer Experience Guarantee:**

**STOP!** We strive for an exceptional experience for all of our valued customers. If, for any reason, you need assistance with your Belltech products, *please do not return the products to the store or website you purchased from.* Please call our dedicated experts at (1-800-445-3767) from 7am to 5pm PST.

### **RECOMMENDED TOOLS:**

- Properly rated floor jack and support stands
- Wheel chocks
- Torque wrench up to 200 ft/lbs range
- Standard and Metric socket wrench set
- Standard and Metric wrench set
- Tape measure
- Spring Compressor
- Marking pen
- Safety Glasses

1. Install the BELLTECH strut spacer (150210-120) onto the OEM strut top mount. Align the notch on the strut spacer with the front of the OEM strut top mount.

**(PICTURE 1)**





2. Use the OEM top strut nuts to secure the BELLTECH strut spacer to the OEM strut top-mount. **(PICTURE 2)**  
Torque to 55 ft\*lbs

3. Install the OEM strut with the BELLTECH strut spacer into the frame strut tower. Note: Notch on the strut spacer should be facing outward. **(PICTURE 3)**

4. Using the provided hardware, secure the BELLTECH strut spacer to the frame strut tower with three M10 nuts. **(PICTURE 4)** Torque to 55 ft\*lbs

5. Using the OEM hardware mount the bottom of the OEM strut onto the control arm and torque to factory specifications.

**\*\*\* CONTINUE WITH THE BELLTECH KIT INSTRUCTIONS 150210-888\*\*\***

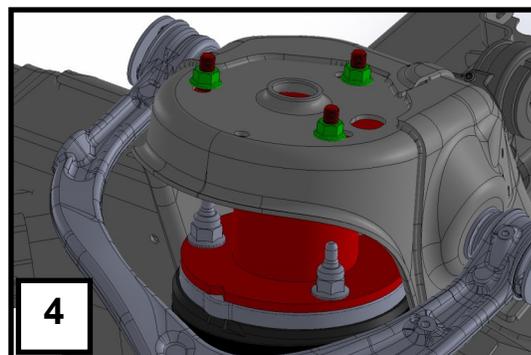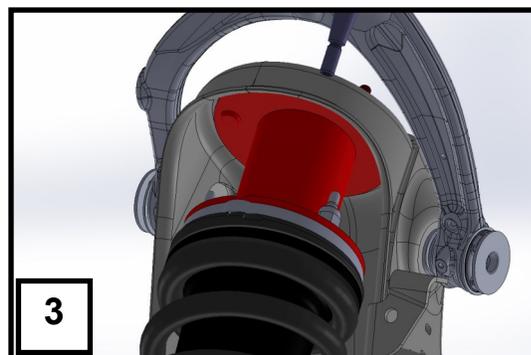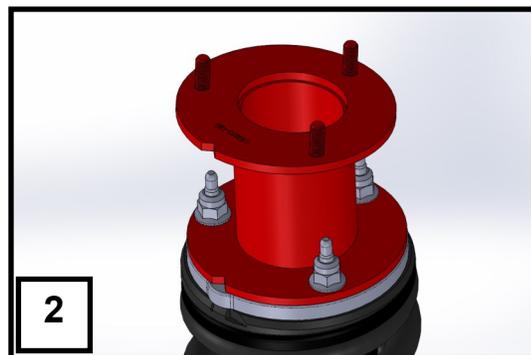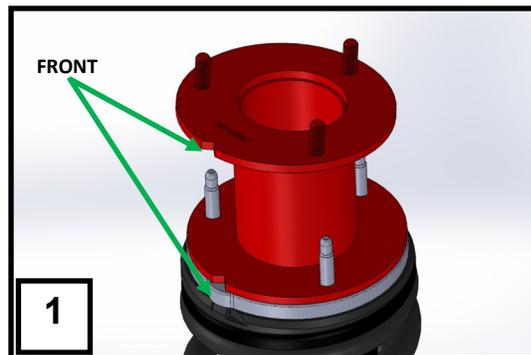

### PARTS LIST

Part Number	Description	QTY
150210-120	STRUT SPACER	2
NUT	M10 x 1.5	6